 
 


Connecting the Terminal Block

Connect main supply (brown - Live, blue - Neutral) into terminal block making sure all connections are tight.

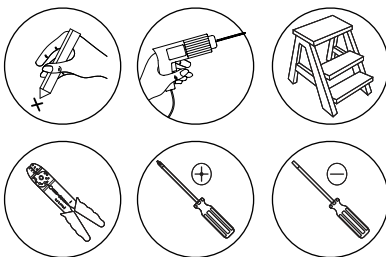

LAMP POST INSTALLATION

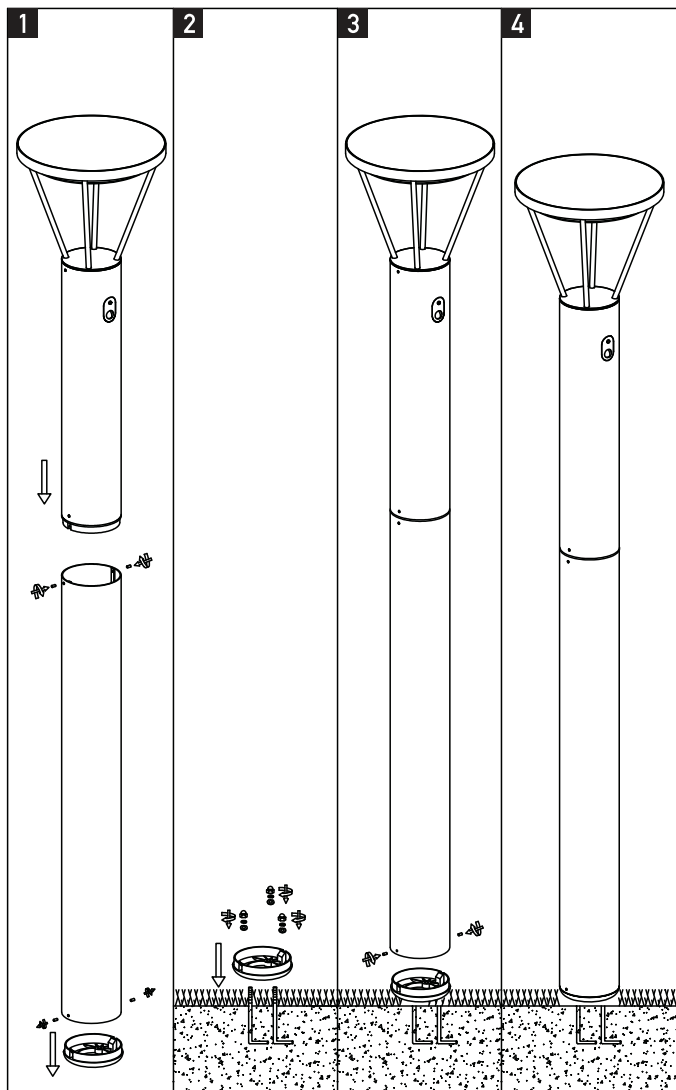

OUTDOOR LAMP POST LIGHT E448

Please read instructions before commencing installation and retain for future reference.

SPECIFICATIONS

- **Lamp Type:** LED | 5W | 3000K | CRI 80 | Non Dimmable
- **Material:** Aluminium | PC Diffuser
- **Ingress Protection:** IP 54 Protection against entry of solid objects greater than 12mm in diameter.

INSTALLATION INSTRUCTIONS



Electrical products can cause death, injury, or property damage. Maintenance and installation should only be carried out by a professional electrician.

 
- Ensure the main supply is switched off.
- Follow the instructions step by step.
- Connect the positive and negative ground wires, and connect the power cord.
- Making sure all connections are tight.
- Reconnect power.

WARNING




Make sure that the products are installed properly before connecting to electricity. Do not cover the luminaire. Do not exceed the maximum wattage rating of the lamp. If the light source is contained in this luminaire (integrated LED), it shall only be replaced by the manufacturer, his service agent, or a similarly qualified person.



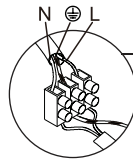


Connecting the Terminal Block

 Connect main supply (brown - Live, blue - Neutral) into terminal block making sure all connections are tight.

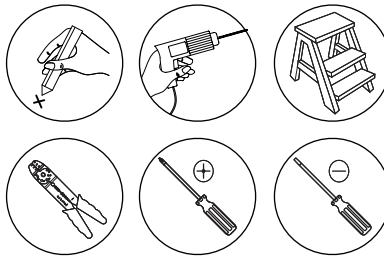

BOLLARD INSTALLATION

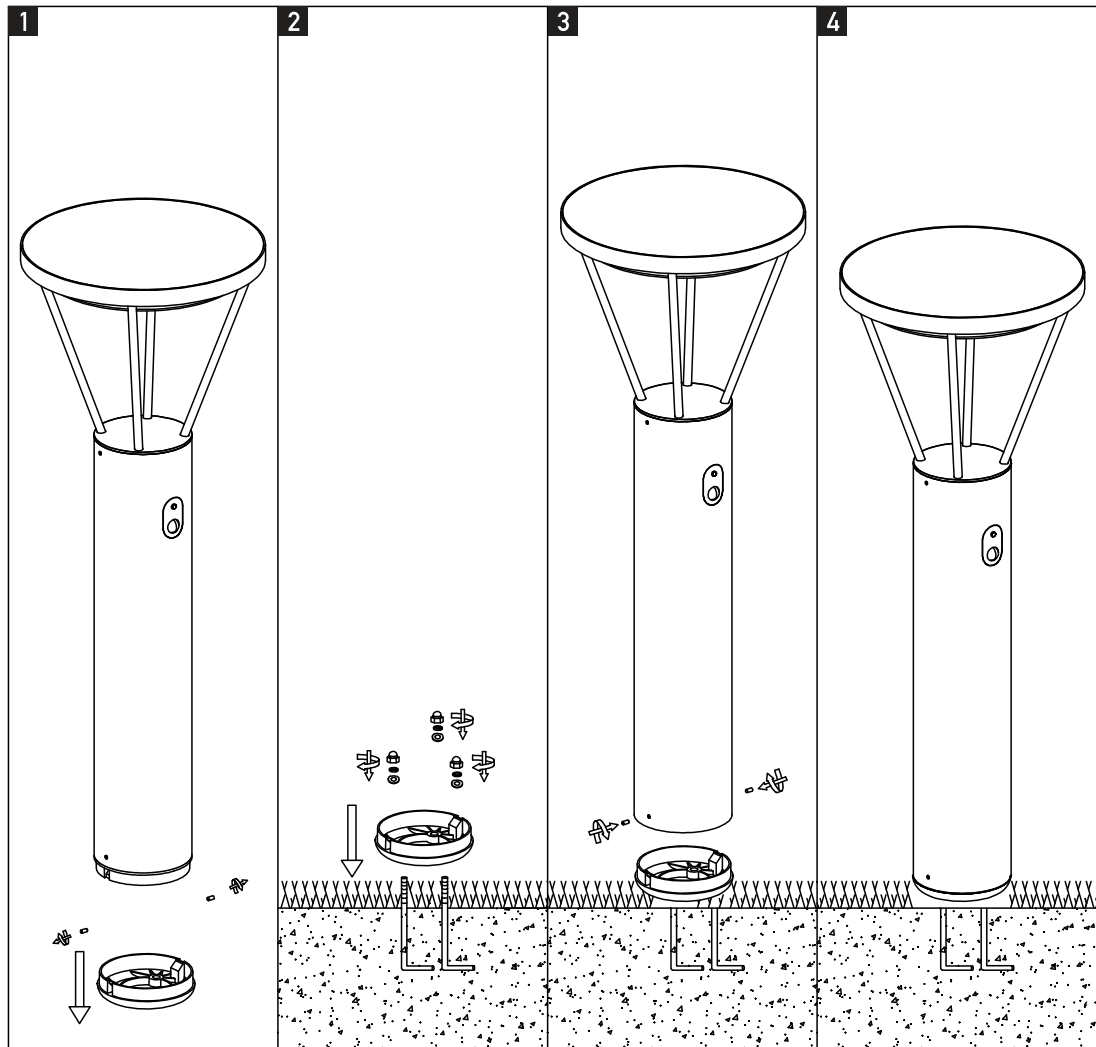 

OUTDOOR LAMP POST LIGHT E448

Please read instructions before commencing installation and retain for future reference.

SPECIFICATIONS

- **Lamp Type:** LED | 5W | 3000K | CRI 80 | Non Dimmable
- **Material:** Aluminium | PC Diffuser
- **Ingress Protection:** IP 54 Protection against entry of solid objects greater than 12mm in diameter.

INSTALLATION INSTRUCTIONS



Electrical products can cause death, injury, or property damage. Maintenance and installation should only be carried out by a professional electrician.

- Ensure the main supply is switched off.
- Follow the instructions step by step.
- Connect the positive and negative ground wires, and connect the power cord.
- Making sure all connections are tight.
- Reconnect power.

WARNING



Make sure that the products are installed properly before connecting to electricity. Do not cover the luminaire. Do not exceed the maximum wattage rating of the lamp. If the light source is contained in this luminaire (integrated LED), it shall only be replaced by the manufacturer, his service agent, or a similarly qualified person.

