 



## RECESSED BASIC INSTALLATION



S344 / S345

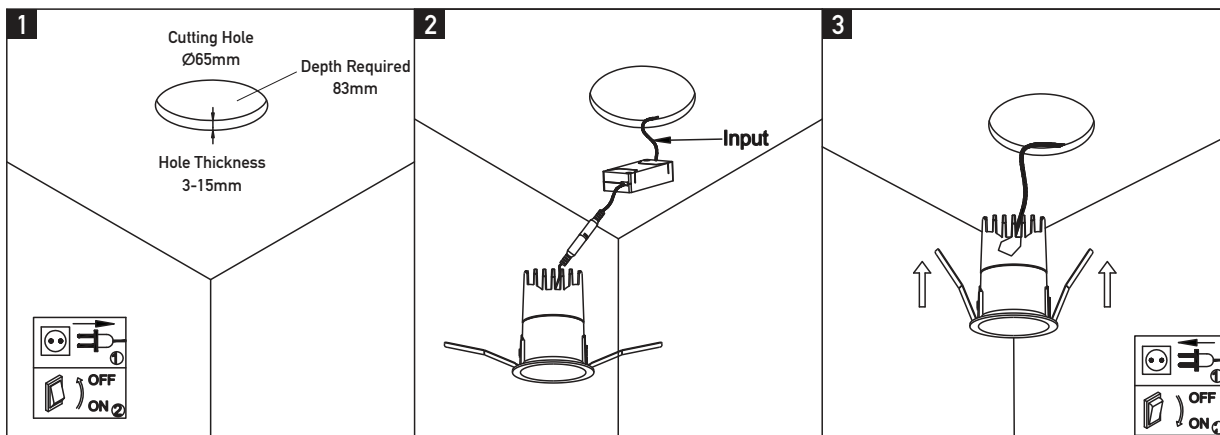

RFLBS344 / RFLWS344  
RFLNS344 / RFLGS344



OPTC-S344-15D  
beam angle 15°



OPTC-S344-24D  
beam angle 24°

### RECOMMENDED DRIVERS

On-Off Driver must be ordered separately with the Code FLS21 for 1 fixture (pass from the hole).  
DALI Driver must be ordered separately with the Code FLS42D for 1 fixture (pass from the hole).

# INDOOR DOWNLIGHT SPOT S345

Please read instructions before commencing installation and retain for future reference.

## SPECIFICATIONS

- **Lamp Type:** LED | 15W | 3000K | CRI 92 | DALI | On-Off | Beam Angle 36°
- **Input:** 36V | 350mA
- **Material:** Aluminium
- **Ingress Protection:** IP44 Protection against entry of solid objects greater than 12mm in diameter.

## INSTALLATION INSTRUCTIONS

 
**!** Electrical products can cause death, injury, or property damage. Maintenance and installation should only be carried out by a professional electrician.

- Ensure the main supply is switched off.
- Follow the instructions step by step.
- Connect the wires and the power cord.
- Making sure all connections are tight.
- Reconnect power.



## WARNING

**!** Make sure that the products are installed properly before connecting to electricity. Do not cover the luminaire with thermally insulating material. Do not exceed the maximum wattage rating of the lamp. If the light source is contained in this luminaire (integrated LED), it shall only be replaced by the manufacturer, his service agent, or a similarly qualified person.





## RECESSED ADJUSTABLE INSTALLATION

 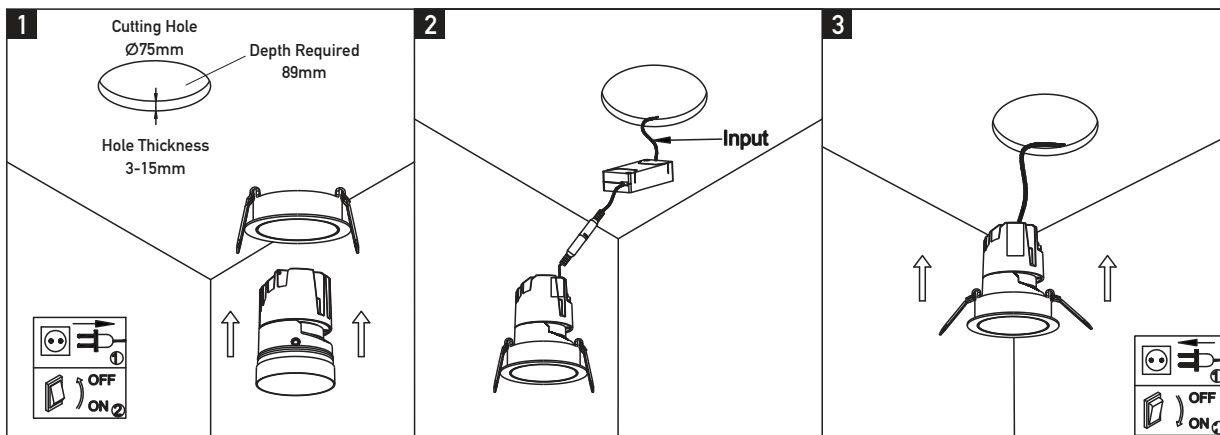

S344 / S345



 
DAB344 / DAW344



OPTC-S344-15D  
beam angle 15°



OPTC-S344-24D  
beam angle 24°



RRB344 / RRW344

### RECOMMENDED DRIVERS

On-Off Driver must be ordered separately with the Code FLS21 for 1 fixture (pass from the hole).  
DALI Driver must be ordered separately with the Code FLS42D for 1 fixture (pass from the hole).

## INDOOR DOWNLIGHT SPOT S345

Please read instructions before commencing installation and retain for future reference.

### SPECIFICATIONS

- **Lamp Type:** LED | 15W | 3000K | CRI 92 | DALI | On-Off | Beam Angle 36°
- **Input:** 36V | 350mA
- **Material:** Aluminium
- **Ingress Protection:** IP44 Protection against entry of solid objects greater than 12mm in diameter.

### INSTALLATION INSTRUCTIONS

 
**!** Electrical products can cause death, injury, or property damage. Maintenance and installation should only be carried out by a professional electrician.

- Ensure the main supply is switched off.
- Follow the instructions step by step.
- Connect the wires and the power cord.
- Making sure all connections are tight.
- Reconnect power.



### WARNING

**!** Make sure that the products are installed properly before connecting to electricity. Do not cover the luminaire with thermally insulating material. Do not exceed the maximum wattage rating of the lamp. If the light source is contained in this luminaire (integrated LED), it shall only be replaced by the manufacturer, his service agent, or a similarly qualified person.





## RECESSED NON ADJUSTABLE INSTALLATION

 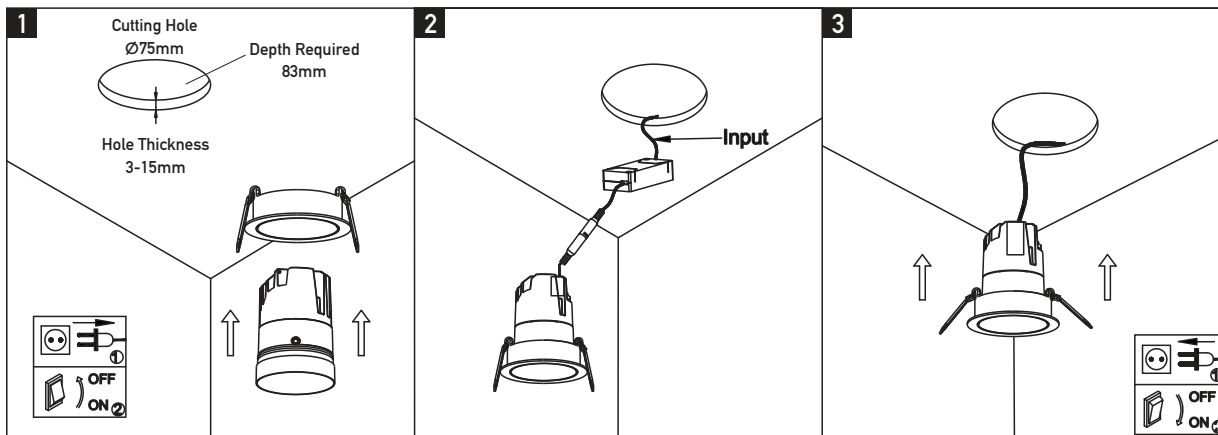

S344 / S345



 
DFB344 / DFW344 / DFG344



OPTC-S344-15D  
beam angle 15°



OPTC-S344-24D  
beam angle 24°



RRB344 / RRW344

### RECOMMENDED DRIVERS

On-Off Driver must be ordered separately with the Code FLS21 for 1 fixture (pass from the hole).  
DALI Driver must be ordered separately with the Code FLS42D for 1 fixture (pass from the hole).

## INDOOR DOWNLIGHT SPOT S345

Please read instructions before commencing installation and retain for future reference.

### SPECIFICATIONS

- **Lamp Type:** LED | 15W | 3000K | CRI 92 | DALI | On-Off | Beam Angle 36°
- **Input:** 36V | 350mA
- **Material:** Aluminium
- **Ingress Protection:** IP44 Protection against entry of solid objects greater than 12mm in diameter.

### INSTALLATION INSTRUCTIONS

 
**!** Electrical products can cause death, injury, or property damage. Maintenance and installation should only be carried out by a professional electrician.

- Ensure the main supply is switched off.
- Follow the instructions step by step.
- Connect the wires and the power cord.
- Making sure all connections are tight.
- Reconnect power.



### WARNING

**!** Make sure that the products are installed properly before connecting to electricity. Do not cover the luminaire with thermally insulating material. Do not exceed the maximum wattage rating of the lamp. If the light source is contained in this luminaire (integrated LED), it shall only be replaced by the manufacturer, his service agent, or a similarly qualified person.





## TRIMLESS ADJUSTABLE INSTALLATION

 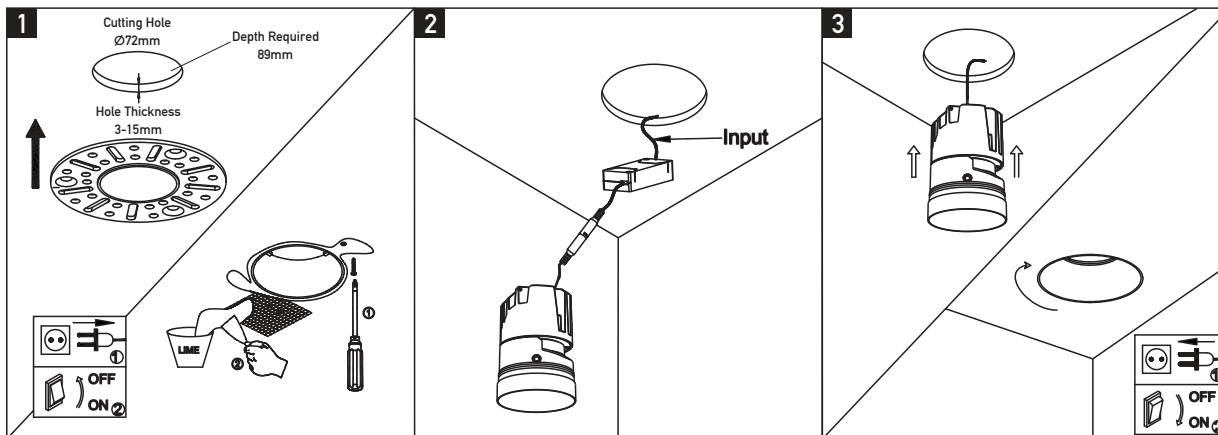

S344 / S345



DAB344 / DAW344



OPTC-S344-15D  
beam angle 15°



OPTC-S344-24D  
beam angle 24°



TRML344

### RECOMMENDED DRIVERS

On-Off Driver must be ordered separately with the Code FLS21 for 1 fixture (pass from the hole).  
DALI Driver must be ordered separately with the Code FLS42D for 1 fixture (pass from the hole).

# INDOOR DOWNLIGHT SPOT S345

Please read instructions before commencing installation and retain for future reference.

## SPECIFICATIONS

- **Lamp Type:** LED | 15W | 3000K | CRI 92 | DALI | On-Off | Beam Angle 36°
- **Input:** 36V | 350mA
- **Material:** Aluminium
- **Ingress Protection:** IP44 Protection against entry of solid objects greater than 12mm in diameter.

## INSTALLATION INSTRUCTIONS

 
**!** Electrical products can cause death, injury, or property damage. Maintenance and installation should only be carried out by a professional electrician.

- Ensure the main supply is switched off.
- Follow the instructions step by step.
- Connect the wires and the power cord.
- Making sure all connections are tight.
- Reconnect power.



## WARNING

**!** Make sure that the products are installed properly before connecting to electricity. Do not cover the luminaire with thermally insulating material. Do not exceed the maximum wattage rating of the lamp. If the light source is contained in this luminaire (integrated LED), it shall only be replaced by the manufacturer, his service agent, or a similarly qualified person.





## TRIMLESS NON ADJUSTABLE INSTALLATION

 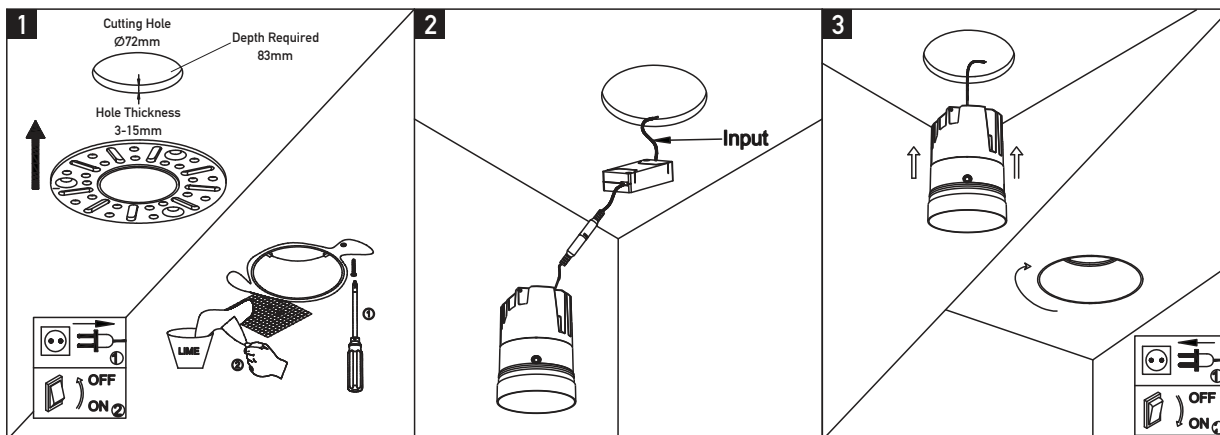

S344 / S345



DFB344 / DFW344 / DFG344



OPTC-S344-15D  
beam angle 15°



OPTC-S344-24D  
beam angle 24°



TRML344

### RECOMMENDED DRIVERS

On-Off Driver must be ordered separately with the Code FLS21 for 1 fixture (pass from the hole).  
DALI Driver must be ordered separately with the Code FLS42D for 1 fixture (pass from the hole).

## INDOOR DOWNLIGHT SPOT S345

Please read instructions before commencing installation and retain for future reference.

### SPECIFICATIONS

- **Lamp Type:** LED | 15W | 3000K | CRI 92 | DALI | On-Off | Beam Angle 36°
- **Input:** 36V | 350mA
- **Material:** Aluminium
- **Ingress Protection:** IP44 Protection against entry of solid objects greater than 12mm in diameter.

### INSTALLATION INSTRUCTIONS

**!** Electrical products can cause death, injury, or property damage. Maintenance and installation should only be carried out by a professional electrician.

- Ensure the main supply is switched off.
- Follow the instructions step by step.
- Connect the wires and the power cord.
- Making sure all connections are tight.
- Reconnect power.

### WARNING

**!** Make sure that the products are installed properly before connecting to electricity. Do not cover the luminaire with thermally insulating material. Do not exceed the maximum wattage rating of the lamp. If the light source is contained in this luminaire (integrated LED), it shall only be replaced by the manufacturer, his service agent, or a similarly qualified person.

