


Kištukinio WIFI termostato Feelspot WH22.09 instrukcija

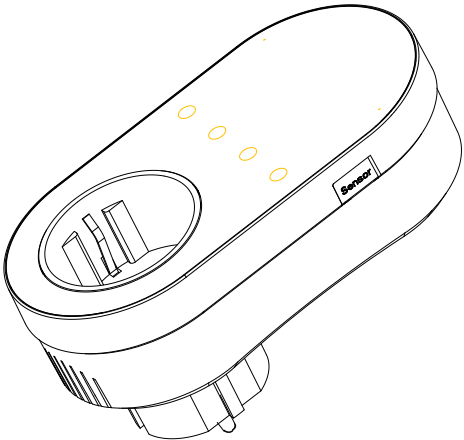

Ačiū, kad renkatės mus!

Dėkojame, kad pasirinkote Feelspot WH22.09 termostatą. Prieš pradėdant naudojimą, rekomenduojame įdėmiai perskaityti prietaiso naudojimo vadovą (instrukciją).

Pakuotės sudėtis

Termostatas 1 vnt., instrukcija 1 vnt.; QC sertifikatas 1 vnt. Dėmesio: sensorius įsigijamas atskirai.

Apie termostatą

Išmanusis kištukinis termostatas Feelspot WH22.09 gali būti naudojamas namų šildymui, vėsinimui valdyti pasinaudojant išmaniuoju telefonu. Galite valdyti namų, prekybos centro ar pramonės vietas. Prieš naudodami įsitikinkite, kad įsitikinkite, kad gaminys tinkamas valdyti jūsų šildymo ar vėsinimo produktui.


Išvaizda

- 1. Kompaktiškas dydis;
- 2. Perlamutrinė balta prietaiso spalva;
- 3. Lenktas korpusas;

Funkcijos

- 1. Jutikliniai mygtukai: nereikia jaudintis, kad mygtukai užstrigs ir neatšoks;
- 2. Vienas įrenginys - šildymo ir vėsinimo valdymas;
- 3. Vidiniai ir išoriniai jutikliai; įmontuotas jutiklis, pasirenkamas išorinis jutiklis;
- 4. Šildymo indikacija: dvi indikacinės lemputės kairėje ir dešinėje;
- 5. Dviejų temperatūrų sistema: palaiko tiek Celsijaus °C, tiek Farenheito laipsnių atvaizdavimą;
- 6. Europinio standarto kištukas;
- 7. Patogus išplėstinis termostato valdymas su programėlės pagalba.
- 8. Prietaisas suderinamas su Google Assistant ir Amazon Alexa namų valdymo sistemomis.
- 9. Programuojamas termostatas Feelspot WH22.09 valdomas su programėle „Smart Life“, kurią atsisiųsti galite naudojantis operacinę sistemą „Android“ per „Google Play“ parduotuvę arba naudojantis iOS operacinę sistemą per „App Store“ parduotuvę.

Matmenys ir termostato instaliavimas
Milimetrais, mm

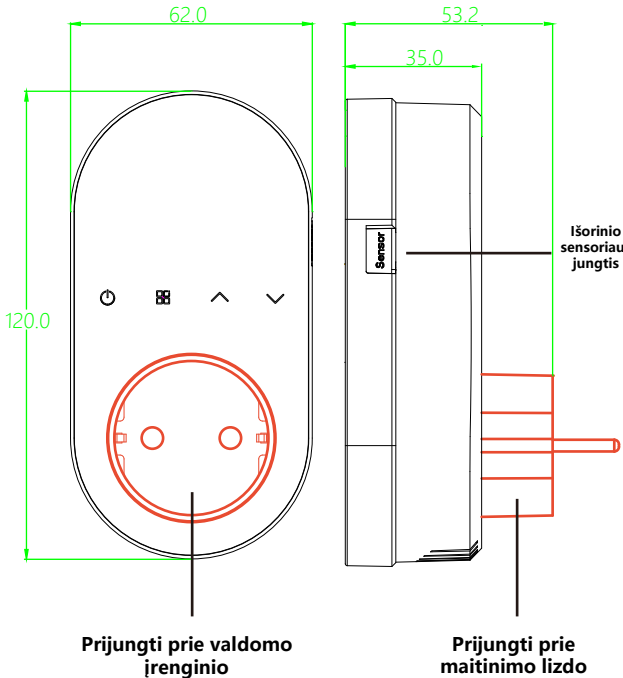

Atsargumo priemonės prieš montuojant

- 1. Prieš montuodami įsitikinkite, kad šio gaminio kištuko tipas tinka jūsų vietiniam standartui ir šildymo įrangai;
- 2. Dėl įrangos gedimo kreipkitės į garantinį aptarnavimą, netaisykite patys;
- 3. Prieš pradėdami prietaiso instaliaciją, atidžiai perskaitykite instrukciją.



Techniniai duomenys

Įtampa: 95~220V, 50~60Hz
Maks. apkrova: 16A
Nustatytos temperatūros paklaida: ±0.5°C
Temperatūros reguliavimo diapazonas: 5 - 90°C, (galima nustatyti)
Darbinės temperatūros diapazonas 0 - 45°C
Apsaugos klasė: IP20
Matmenys (mm): 62 x 120 x 35

Termostato naudojimas

Naudojimo instrukcijos

- 1.Įjungimas:** Spauskite įjungimo/išjungimo mygtuką ant termostato.
- 2.Šildymo/vėsinimo režimas:** Šis termostatas palaiko vėsinimą arba šildymo režimą, kurį galima pasirinkti ir programėlės telefone pagalba.
- 3. Rankinis / programavimas / laikinas rankinis / atostogų režimas:** Programėlėje arba termostato valdymo skydelyje valdykite rankinio / programavimo / atostogų režimus. Priklausomai nuo režimo, atitinkama piktograma bus rodoma ekrano viršuje.

Rankinis režimas: šiame režime termostatas valdo įrenginį pagal rankiniu būdu nustatytą temperatūrą.
Programavimo režimas: šiame režime ekrane rodoma dabartinis programavimo ciklas, kuriame yra termostatas, ir termostatas valdo įrenginį pagal savaitės programavimo grafiką.
Laikinas rankinis režimas: rankiniu būdu sureguliuokite temperatūrą ir įjunkite laikiną rankinį režimą. Ekrane sumirksėjus rankinio valdymo piktogramai, termostatas vykdys esamą nustatytą temperatūrą, kuri bus atkurta kito programavimo ciklo metu.

Atostogų režimas: Šiame režime bus rodoma rankinio valdymo ir prgramavimo režimo piktogramos. Termostate išliks fiksuota temperatūra iki numatytų atostogų pabaigos. Atostogų režimo dienos gali būti valdomos programėlėje arba tiesiogiai valdant patį termostatą. Palaikykite įspaudus "Režimas" piktogramą, kad galėtumėte valdyti laiko nustatymus. Tuomet 4 kartus vėl paspauskite "Režimas" piktogramą, kad įvestumėte reikalingą atostogų dieną (-as). Tai atlikus, ekrane pradės mirksėti "RT" piktograma.

4.Temperatūros valdymas: temperatūrą valdykite tiesiogiai termostate arba su mobiliąją programėle.

5.Laiko valdymas: naudojantis mobiliąją programėle, laikas bus automatiškai sinchronizuojamas WIFI dėka. Jeigu termostatą valdysite mechaniniu būdu, laiką valdykite pasirinkus laiko ikonėles ir nustatykite reikiamą laiką.

6. Apsauga nuo vaikų: įjunkite apsaugą nuo vaikų išmanaus telefono programėlėje arba nustatykite tiesiogiai ant termostato, pasirinkdami užrakto ikonėlę bei palaikydami 5 sekundes.

7.5+ 1+1 programavimo režimo nustatymas: galima nustatyti wifi versiją: jei naudojate ne „Wi-Fi“ versiją, ilgiau paspauskite "režimo" mygtuką, kad įvestumėte laiko nustatymus. Tuomet paspauskite "režimas" mygtuką 4 kartus, norint suprogramuoti termostatą. Tuo tarpu ekrane sumirksės "1,2,3,4,5". Ties pirmu ciklu pasirinkite režimo mygtuką ir nustatykite laiko ir dienų ciklus. Naudokite "aukščiau" / "žemiau" mygtukus, norėdami pakoreguoti vertę. Atlikę nustatymą, išjunkite vieną kartą termostatą, kad duomenys galėtų išsisaugoti.

Numatytieji programos tvarkaraščio nustatymai

Laiko ekranas	Pirmad.-antrad. (12345 atvaizduojama ekrane)		Šeštad. (atvaizduojama ekrane) 8:00~11:30		Sekmad. (atvaizduojama ekrane)	
	Laikas	Temp.	Laikas	Temp	Laikas	Temp
Period 1	6:00~8:00	20	6:00~8:00	20	6:00~8:00	20
Period 2	8:00~11:30	15	8:00~11:30	20	8:00~11:30	20
Period 3	11:30~13:00	15	11:30~13:00	20	11:30~13:00	20
Period 4	13:30~17:00	15	13:30~17:00	20	13:30~17:00	20
Period 5	17:00~22:00	22	17:00~22:00	20	17:00~22:00	20
Period 6	22:00~6:00	15	22:00~6:00	15	22:00~6:00	15

8.Išorinio jutiklio temperatūros užklausa: ilgai paspauskite „žemyn“ ir palaikykite 5 sekundes, ekrane bus rodoma jutiklio duomenų temperatūra. Jei neprijungtas joks išorinis jutiklis, bus rodoma „err“.

Išplėstinių parinkčių nustatymai

Išjungtoje prietaiso būsenoje 5 sekundes įspauskite ir palaikykite "režimas" būseną. Pasirinkite funkciją (kodą) ir valdykite ją "aukščiau"/"žemiau" mygtukais. Visi išplėstinių parinkčių nustatymai įsigalios automatiškai iš naujo paleidus termostatą.

Kodas	Funkcija	Nustatymai ir parinktys	Numatytas
1	Temperatūra kompensacija	-9 to 9 °C	-3
2	Deadzone Temp.	1-5°C	1
3	Mygtukų užrakinimas	01: visi mygtukai užrakinti, išskyrus maitinimo mygtuką. 01: visi mygtukai užrakinti.	01
4	Jutiklio tipas	In: Vidinis jutiklis (temperatūrai valdyti) Ou: Išorinis jutiklis (temperatūrai valdyti) AL: vidinis ir išorinis jutiklis (valdomas vidinis jutiklis temperatūra, išorinis jutiklis, ribojantis temperatūrą.)	AL
5	Min.nustatyta Temp.	5-15°C	5
6	Max.nustatyta Temp.	15-45°C	35
7	Temperatūros rodymas	00: Rodyti kambario temperatūrą ir nustatymą temperatūrą, paspauskite aukštyn ir žemyn mygtukus, kad būtų rodoma nustatyta temperatūra 01: rodoma tik nustatyta temperatūra	00
8	Žemos temp. nustatymo lygis	0-10°C	0
9	Aukštos temp. nustatymo lygis	25-70°C	50
10	Energijos taupymo režimas	00:OFF 01:ON	00
11	Vėsinimo energijos taupymo režimas	10-50°C	20
12	Šildymo energijos taupymo režimas	10-50°C	26
13	Vėsinima/Šildymas	0 : Vėsinimo režimas 1 : Šildymo režimas	01
14	°C/°F	0: Degree Celsius °C 1: Fahrenheit °F	00
15	Ekranu ryškumas ne operacijų metu	0~8, kai nustatyta į 0, po 10 sekundžių neveikiant, ekranas išsijungs, paspauskite aukštyn ir žemyn klavišus, kad pabusti	1
16	Restartuoti	00: nėra gamyklinių atstatymų; 01: gamykliniai atstatymai	00
17	Versijos numeris		U1

WIFI

WI-FI prijungimas

Prieš praddami naudoti termostatą, sukonfiguruokite Wi-Fi signalą.

1 žingsnis. Atsisiųskite programėlę (Fig1-1)




Susiraskite "Smartlife" programėlę Apple Store ar Google Play parduotuvėje arba nuskanuokite nurodyta QR kodą (aukščiau). Užsiregistruokite ir atlikite visus programėlėje nurodytus veiksmus.

2 žingsnis. Prisijungimas prie termostato


Jei norite užbaigti prisijungimą, peržiūrėkite toliau pateiktą vadovą.

Metodas 1: Nuskaitykite QR kodą, kad galėtumėte sukonfigūruoti (Fig 2.1-Fig 2.3)

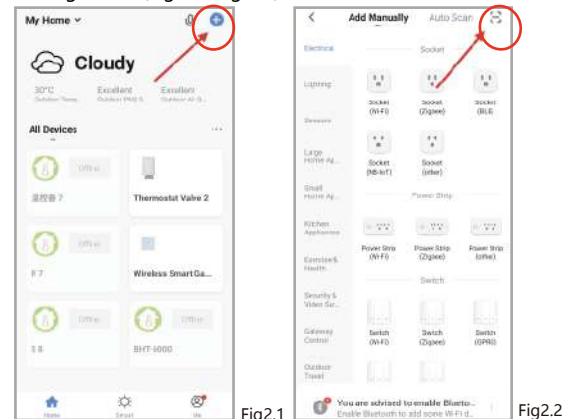

This QR code must be scanned in the APP, Quick jump thermostat pairing.


Metodas 2: Įprastas tinklo priskyrimas (Fig. 2. 1&Fig. 2.3.1)

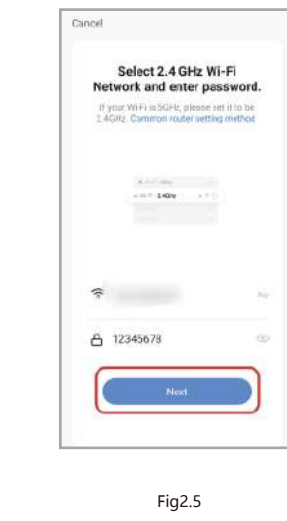

Tinklo paskirstymo režimas:



1. EZ Mode

Kai termostatas yra išjungtas, įspauskite ir laikykite paspaudę "✓" kol termostato ekranas greitai mirksi ir rodoma piktograma "📶", ir tada sekite veiksmus pagal toliau pateiktus paveikslėlius (Fig 2.4-Fig 2.7).

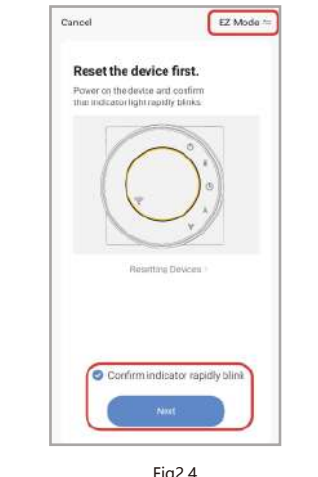

2. AP Mode


Išjungto termostato metu paspauskite ir laikykite "✓", kuomet termostate pradės lėtai mirksėti "📶". Kitus žingsnius sekite žemiau nurodytuose paveikslėliuose (Picture 2.8-Picture 2.14).

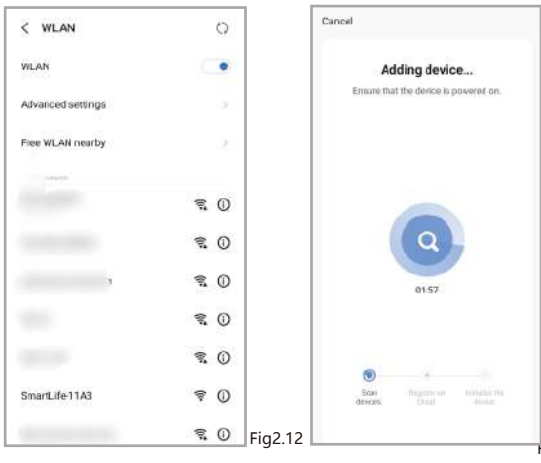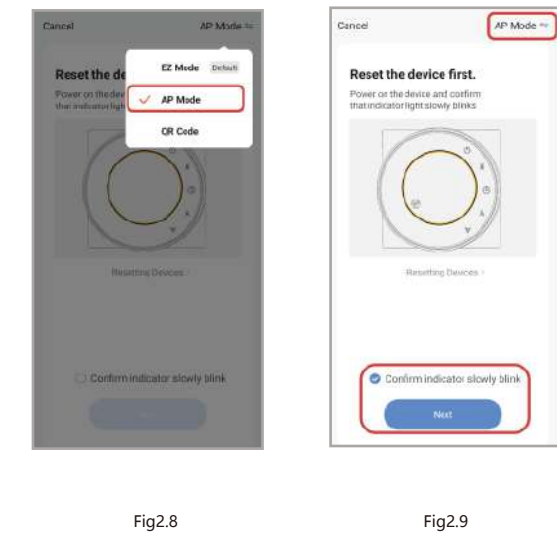

Kuomet prisijungiate prie hotspot tinklo, grįžkite prie SmartLife programėlės.



Daugiau nustatymų

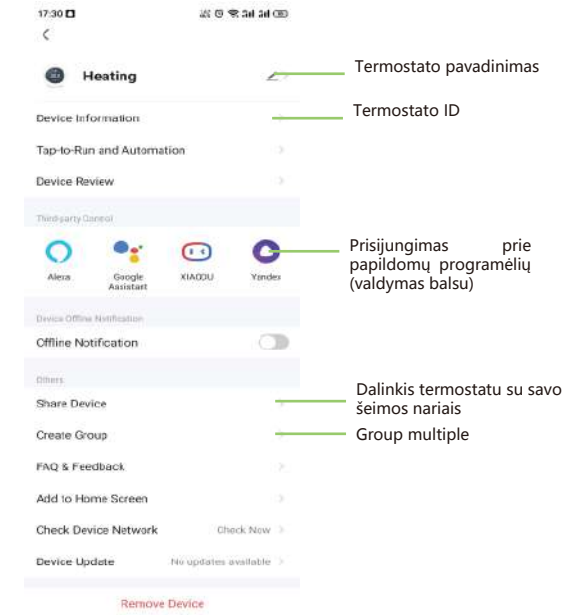

APP veikimo sąsajos aprašymas (šildymo termostatas)




Paprastas problemų sprendimas

No.	Reiškiniai	Sprendimas
1	Maitinimas įjungtas, bet ekranas nerodomas.	Patikrinkite, ar neatsilaisvino gnybtai tarp LCD skydelio ir maitinimo bloko dėžutės.
2	Be išvesties, bet ekranas veikia.	Naudokite naują LCD ekraną arba naują maitinimo bloko dėžutę vietoj senosios.
3	Kambario temperatūra šiek tiek skiriasi nuo faktinės.	Sukalibruokite temperatūrą

Garantija

2 metų garantija nuo įsigijimo datos. Išsamesnės informacijos teiraukitės tiesiogiai pas pardavėją.

Feelspot WH22.09 Smart Thermostat User Manual

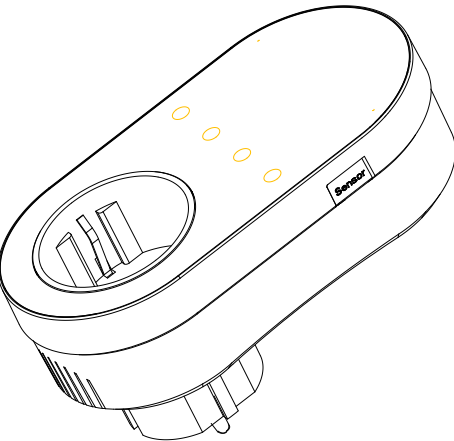


Function Features

- 1. Touch buttons: no need to worry about the buttons being stuck and not rebounding;
- 2. Heat and cool dual mode: heating and cooling, one device, two control modes;
- 3. Internal and external dual senors; default built-in sensor, optional external sensor;
- 4. Heating indication: two working indicator lights on the left and right, know its working status without coming close;
- 5. Dual temperature systems: support Celsius-°C and Fahrenheit-°F switching;
- 6. Various plugs: optional plugs of various specifications, British standard, European standard, American standard, Australian standard, and national standard are optional;
- 7. Convenient control: The advanced options of the thermostat can be set in the APP, which is more convenient.
- 8. Intelligent voice: connected to Tmall Genie, Alexa, Google Assistant, Xiaodu, Yandex, voice control, which frees hands;
- 9. APP control: The APP supports ios/android system, and the temperature is updated in real time; automatically obtains the temperature and humidity, PM2.5 of the local area, and creates intelligent scenes. It has supported all regions and languages at home and abroad, and the service is more comprehensive.

Dimensions and installation instructions

Dimensions: millimeters (mm)

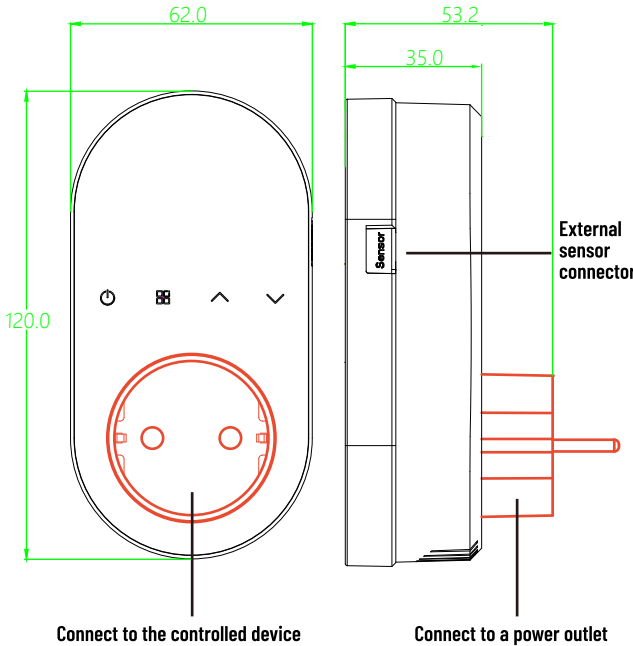

Precautions Before Installation


- 1. Before installation, please confirm that the plug type of this product is suitable for your local standard and heating equipment;
- 2. Please contact the after-sales service for equipment failure, please do not try to repair it by yourself;
- 3. After the installation, please refer to this manual to check again to ensure normal safety



Product Parameters

Voltage: 95~220V, 50~60Hz
Maximum load: 16A
Temperature sensing element: NTC10K
Temperature control accuracy: ±0.5°C
Temperature control range: 5 - 90°C, can be changed in advanced options
Shell material: PC+ABS (flame retardant)
Working environment: 0 - 45°C, 5 -95%RH (no condensation)
Storage temperature: -5 - 55°C
Protection class: IP20
Display temperature range: 5~99°C

Product UI

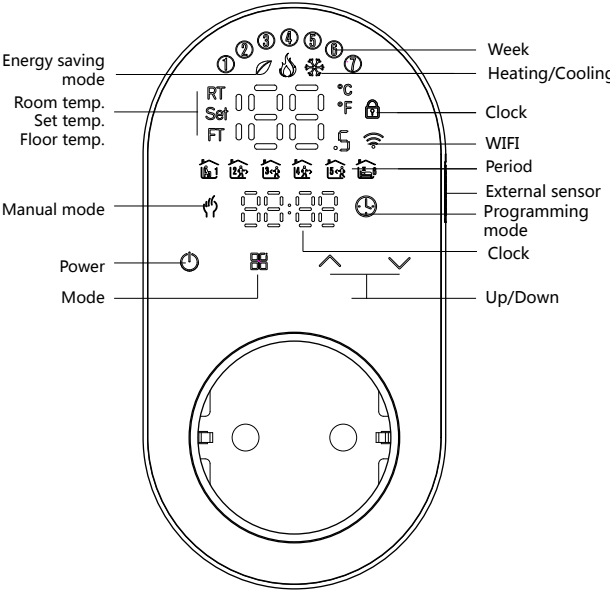

Manipulation Instructions

1.Power: Press to turn the thermostat on/off.

2.Cooling / Heating mode: This thermostat supports cooling or heating mode, which can be selected and switched in the APP, or refer to **"Advanced Options Settings"**.

3.Manual/Programming/Temporary Manual/Holiday Mode: Press in the APP or on the control panel of the thermostat to switch between Manual/Programming/Holiday mode. Depending on the mode, the corresponding icon will be displayed at the top of the screen.

Manual Mode : In this mode, the thermostat controls the device according to the manually set temperature.

Programming Mode : In this mode, the screen displays the current programming cycle the thermostat is in, and the thermostat controls the device according to the weekly programming schedule. Please refer to point 7 for timetable setting.

Temporary manual mode: In the programming mode, manually adjust the temperature and enter the temporary manual mode. At this time, the screen display icon will flash, and the thermostat will execute the current set temperature at this time, and the temperature will restore during next weekly programming cycle.

Holiday Mode : In this mode, the screen will display the icons and , and the thermostat will maintain a fixed temperature until the holiday is over. Lasting days of Holiday Mode can be set in the APP or Or long press to enter the clock setting, then press 4 times to enter the holiday mode day setting, the test screen "RT" will flash..

4.Temperature setting: Press / to set the target temperature.

5.Time setting: The Wifi version will automatically synchronize the time after connecting to the network. Or long press to enter the time setting, and press / to adjust the value, respectively set up for minutes, hours, and days of the week ("" at the top of the screen means Monday, "" means Tuesday, and so on) . After the adjustment is completed, press to exit the time setting.

6.Child lock : Press and hold and at the same time for 5 seconds, the thermostat will enter the child lock mode. You can also set full lock and half lock in advanced options, please refer to the description of advanced options below.

7.5+1+1 programming mode setting: wifi version can be set in APP. In the non-wifi version, long press to enter the clock setting, and then press 4 times to enter the programming mode setting. At this time, the screen displays (), the minute of the time flashes, and the cycle is 1 "". Then press to select and set the hour, temperature and cycle. Press or to adjust the corresponding value. After completing the setting, you need to shut down once to store the data in the thermostat.

Default settings for program schedule

Time display	MON.-FRI. (shows on scteen)		SAT. (shows on scteen) 8:00~11:30		SUN. (shows on scteen)	
	TIME	TEMP.	ON TIME	TEMP.	ON TIME	TEMP.
Period 1	6:00~8:00	20	6:00~8:00	20	6:00~8:00	20
Period 2	8:00~11:30	15	8:00~11:30	20	8:00~11:30	20
Period 3	11:30~13:00	15	11:30~13:00	20	11:30~13:00	20
Period 4	13:30~17:00	15	13:30~17:00	20	13:30~17:00	20
Period 5	17:00~22:00	22	17:00~22:00	20	17:00~22:00	20
Period 6	22:00~6:00	15	22:00~6:00	15	22:00~6:00	15

8.External sensor data query: long press for 5 seconds, the screen will display the temperature of the sensor data. If no external sensor is connected, "err" will be displayed

Advanced Options Settings

In the power-off state, long press for 5 seconds to enter the advanced options settings. Press to select a function, and press or to adjust the corresponding code. All advanced options settings will take effect automatically after restarting the thermostat.

Code	Function	Setting and options	Default
1	Temperature compensation	-9 to 9 °C	-3
2	Deadzone Temp.	1-5°C	1
3	Button Locking	01:All buttons are locked except power button. 01:All buttons are locked.	01
4	Sensor typer	In: Internal Sensor(to control the temp.) Ou: External Sensor (to control the temp.) AL: Internal&External Sensor (Internal sensor to control the temp., external sensor to limit the temp.)	AL
5	Min.Set Temp.	5-15°C	5
6	Max.Set Temp.	15-45°C	35
7	Temperature display	00: Display the room temperature and the set temperature, press the up and down keys to display the set temperature 01: Only display the set temperature	00
8	Low temp. protection setting.	0-10°C	0
9	High temp. protection setting.	25-70°C	50
10	Energy saving Mode	00:OFF 01:ON	00
11	Cool Energy saving Temp.	10-50°C	20
12	Heat Energy saving Temp.	10-50°C	26
13	Cool/Heat	0 : Cool Mode 1 : Heat Mode	01
14	°C/°F	0: Degree Celsius °C 1: Fahrenheit °F	00
15	Screen brightness when no operation	0-8, when set to 0, after 10 seconds of no operation, the screen will turn off, press the up and down keys to wake up	1
16	Reset	00: No factory reset; 01: Factory reset	00
17	Version number		U1

Thank you for purchasing

Thank you for choosing our thermostat. We are committed to bringing together high-end technology, high-quality production technology, safe and reliable materials to produce high-quality and low-cost products. Please read this manual for comprehensive product information. Also make sure a professional installs the thermostat and follows all your local regulations.

Packing List

Thermostat*1 User Manual*1 QC certificate*1
External Sensor 2.5m (optional)*1

About Your Thermostat

Feelspot WH22.09 is suitable for electric heating radiator, electric cooling and temperature control system.It can be used in smart homes, shopping malls, and industrial places. Before use, please confirm that this product is compatible with your temperature control equipment.

Appearance Features

- 1. Small size: small and flexible, can be installed without a large space;
- 2. Classic color matching: pearl white, midnight black, into a variety of decoration styles;
- 3. Warm hand feel: curved body, chamfer transition, no hand cutting;

ABOUT WIFI

WI-FI CONNECTION

Before using your Wi-Fi thermostat for the first time,you must configure the Wi-Fi signal and settings through your smartphone or tablet ,This will allow communication between your connected devices

Step 1 Download your APP (Fig1-1)



Fig 1-1



Fig 1-2 IOS



Fig 1-3 Android

Search for "Smartlife" in Apple Store or Google Play or use a browser to scan the QR code above (Figure 1-2), and complete account registration and installation according to the guidance of the APP.

Step 2. Connect the thermostat

Check the tutorial below to complete the connection and setup.

Method 1: Scan the QR code to configure the network guide (Fig 2.1-Fig 2.3)



Fig2.1



Fig2.2



This QR code must be scanned in the APP, Quick jump thermostat pairing.



Fig2.3

Method 2: Ordinary distribution network guidance (Fig. 2. 1&Fig. 2.3.1)



Fig2.3.1

Network distribution mode:

1、EZ Mode

When the thermostat is off, press and hold the " √ "until the thermostat screen flashes quickly and displays the " 📶 " icon, and then operate according to the following figure (Fig 2.4-Fig 2.7).



Fig2.4



Fig2.6



Fig2.7

2、AP Mode

With the thermostat off, press and hold √ until the thermostat 📶 icon flashes slowly.(If the 📶 icon flashes quickly, continue to press and hold √ until 📶 flashes slowly), then follow the diagrams below (Picture 2.8-Picture 2.14).



Fig2.8



Fig2.9



Fig2.12



Fig2.13

After connecting to this hotspot, return to the "smartlife" APP


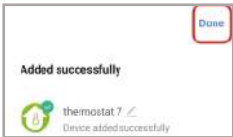


Fig2.14

More settings

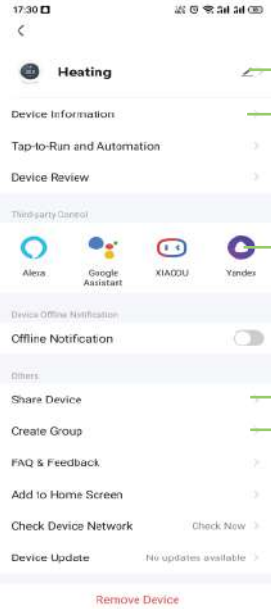

Modify the name of the thermostat
View the virtual ID of the thermostat

Connect smart voice audio guide

Share the thermostat with your family
Group multiple thermostats for management

APP operation interface description (heating thermostat)



More Set
Name
Return

Set Temp.
Current Temp.

Set Temp.
Quick Setup
Set Temp. Trim - Up
Set Temp. Trim - Down
Anto/Manual/Temp Hold/Holidays
Week Program Schedule Settings
Setting the Functions and Options
Power

Simplement Exception Handling

No.	Phenomenons	Handling
1	Power is on but without display.	* Check if the terminals between LCD panel and Power Unit Box is loosen.
2	Without output but display works.	* Use a new LCD panel or new Power Unit Box to replace the old one.
3	Room Temp. Is a little different from the actual.	*Do temperature calibration in item 1 of high senior options

Service

24-months warranty since date of purchase
Service beyond the warranty period may need charge.
More details, please contact us.