



Trimless 24V Magnetic Track 6MM

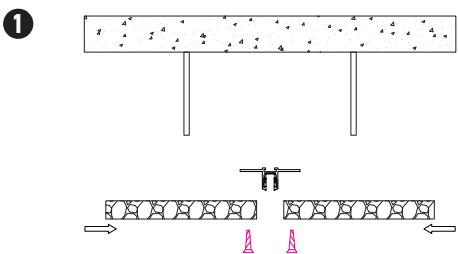


Trimless magnetic track installation in sandwich configuration between two gypsum board panels.

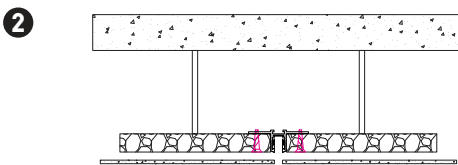


Finish with plastering and painting for a completely trimless result.

DC 24V Feeder 25264

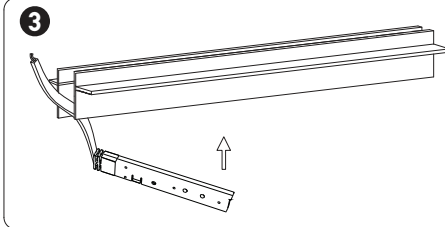

End Caps (2pcs) 25458 | 25458-G

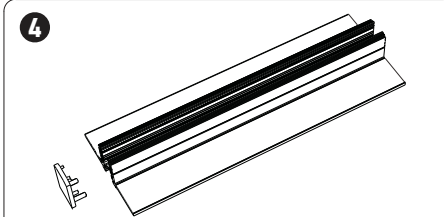

Please read instructions before commencing installation and retain for future reference.

Install the trimless magnetic track between two gypsum board panels.

Fix the track onto the first gypsum board panel.

Attach the second gypsum board panel by screwing it onto the track.

Assemble all components and securely mount the entire structure onto the ceiling or wall.

Connect a feeder to the first magnetic track, linking it to a 24V DC driver for power supply.

Use corners, mechanical connectors, and additional feeders as needed, based on your structural design.

Finish the installation with plastering and painting.



Install the luminaires by pushing the bottom of the module to open or close, following the provided diagrams.

Track Code	Length	Color
25220	100cm	Sandy Black
25221	100cm	Antique Brass
25222	200cm	Sandy Black
25223	200cm	Antique Brass

Corner Code	Installation	Color
25226	Vertical	Sandy Black
25227	Vertical	Antique Brass
25224	Horizontal	Sandy Black
25225	Horizontal	Antique Brass


Notice: For corner it is also required to order 25263

Straight Mechanic Connector 25261

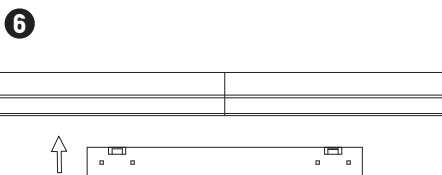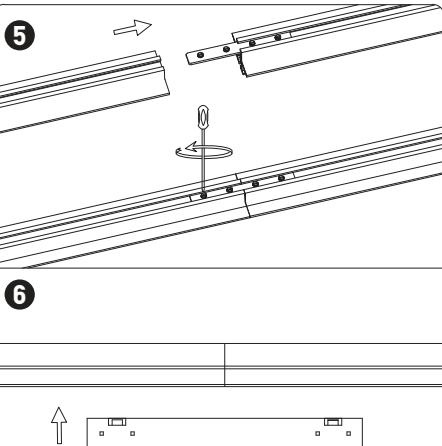


Straight Connector 25262

Vertical Corner 90° 25226, 25227

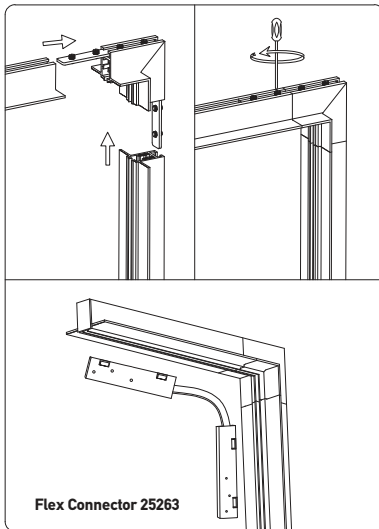

Flex Connector 25263

Horizontal Corner 90° 25224, 25225

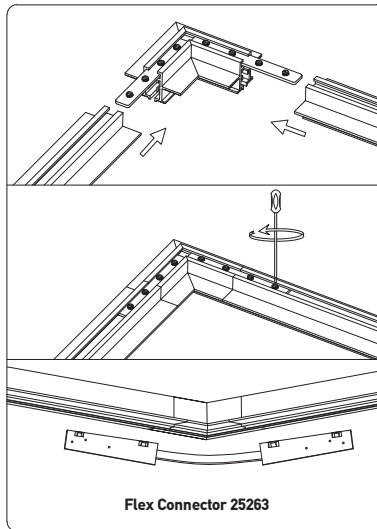

Flex Connector 25263

SYSTEM REFERENCE

- **Track Form:** Linear | Curved
- **Installation:** Trimless | Surface
- **Material:** Aluminium


LED IP 20

CRI 90




CE







Surface 24V Magnetic Track 6MM

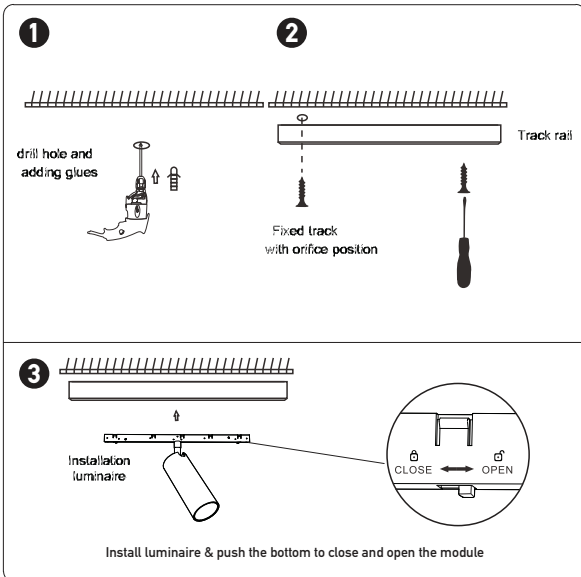

DC 24V Feeder 25264

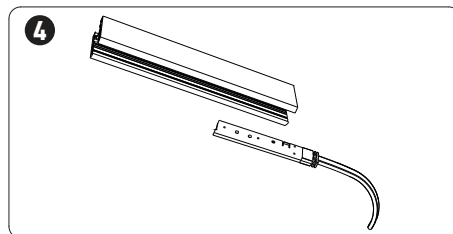

End Caps (2pcs) 25458 | 25458-G

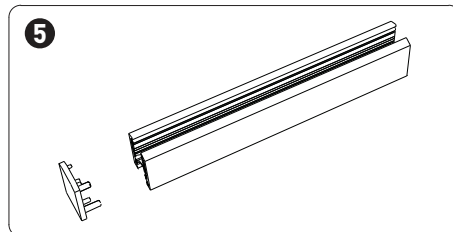

Please read instructions before commencing installation and retain for future reference.

Drill holes in the ceiling or on the wall as required.

Secure the linear or curved magnetic tracks to the surface using screws. Attach a feeder to the first magnetic track in your system and connect it to a 24V DC driver to supply power from the central power source.

Use corners, mechanical connectors, and additional feeders where necessary, according to your structural preferences.


Finally, install the luminaires that meet your needs by pushing the bottom to open or close the module, following the provided diagrams.

Track Code	Length	Color
25228	100cm	Sandy Black
25229	100cm	Antique Brass
25230	200cm	Sandy Black
25231	200cm	Antique Brass


Corner Code	Installation	Color
25234	Vertical	Sandy Black
25235	Vertical	Antique Brass
25232	Horizontal	Sandy Black
25233	Horizontal	Antique Brass

Notice: For corner it is also required to order 25263


Straight Mechanic Connector 25261

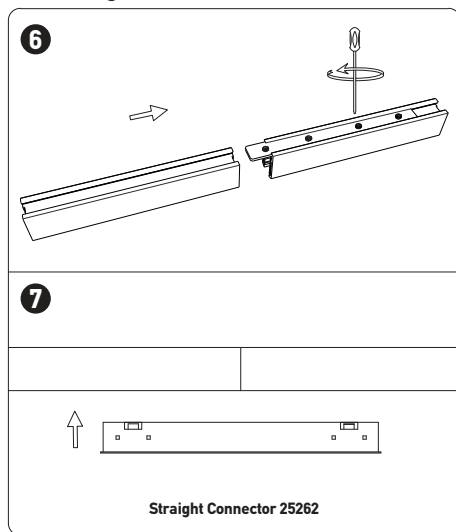

Vertical Corner 90° 25234, 25235

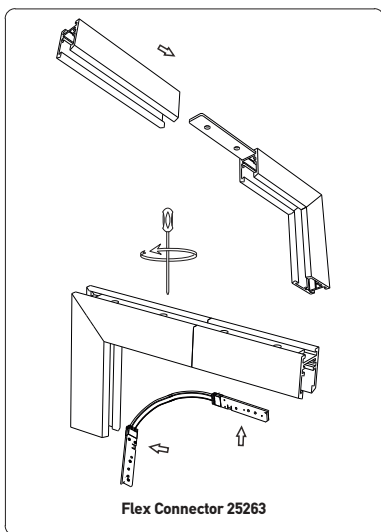

Horizontal Corner 90° 25232, 25233

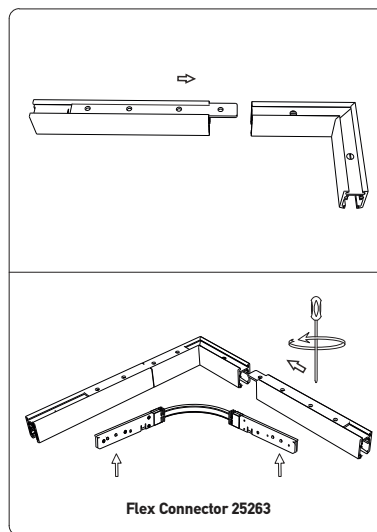

SYSTEM REFERENCE

- Track Form: Linear | Curved
- Installation: Trimless | Surface
- Material: Aluminium

LED IP 20

CRI 90

